



L27/38, L27/38S

See Work card 515-01.00 and 515-06.00

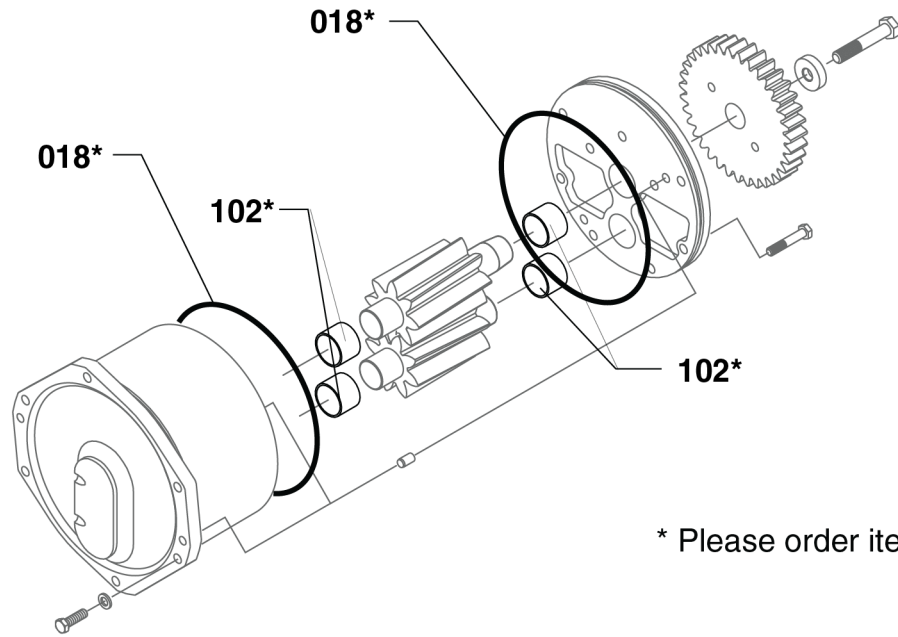

* Please order item 001

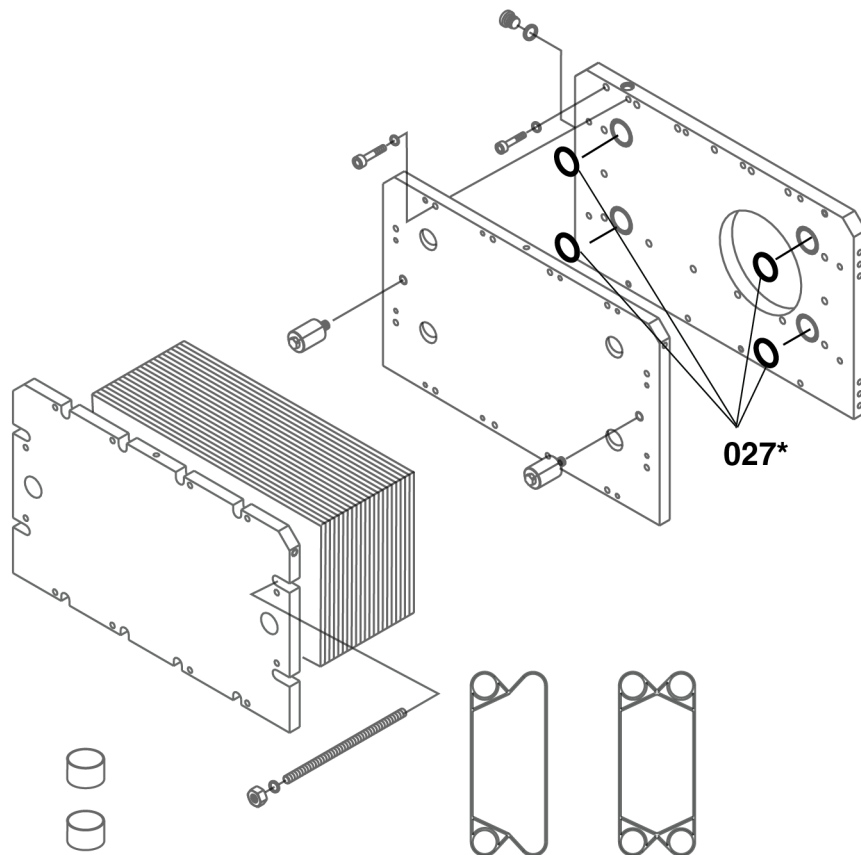

P51724-01	Kit for lubricating oil pump	Spare Part Kit Plate Page 2 (2)
-----------	-------------------------------------	------------------------------------

L27/38, L27/38S

Item No.	Qty	Item Designation	Where to find in the engine instruction book	
001	1/E	Kit for lubricating oil pump		
	2/P	O-ring	P51501	018
	4/K	O-ring	P51506	027
	4/P	Bush	P51501	102

When ordering spare parts, see also page 500.50/600.50/Preface.

* = Only available as part of a spare parts kit/not available separately

Qty/E = Qty/Engine

Qty/K = Qty/Cooler

Qty/P = Qty/Pump